


GFF1S, HFF1S, MGFF1S, GFF1SX, HFF1SX, GFFXS, HFFXS

Montageanleitung Installation Manual

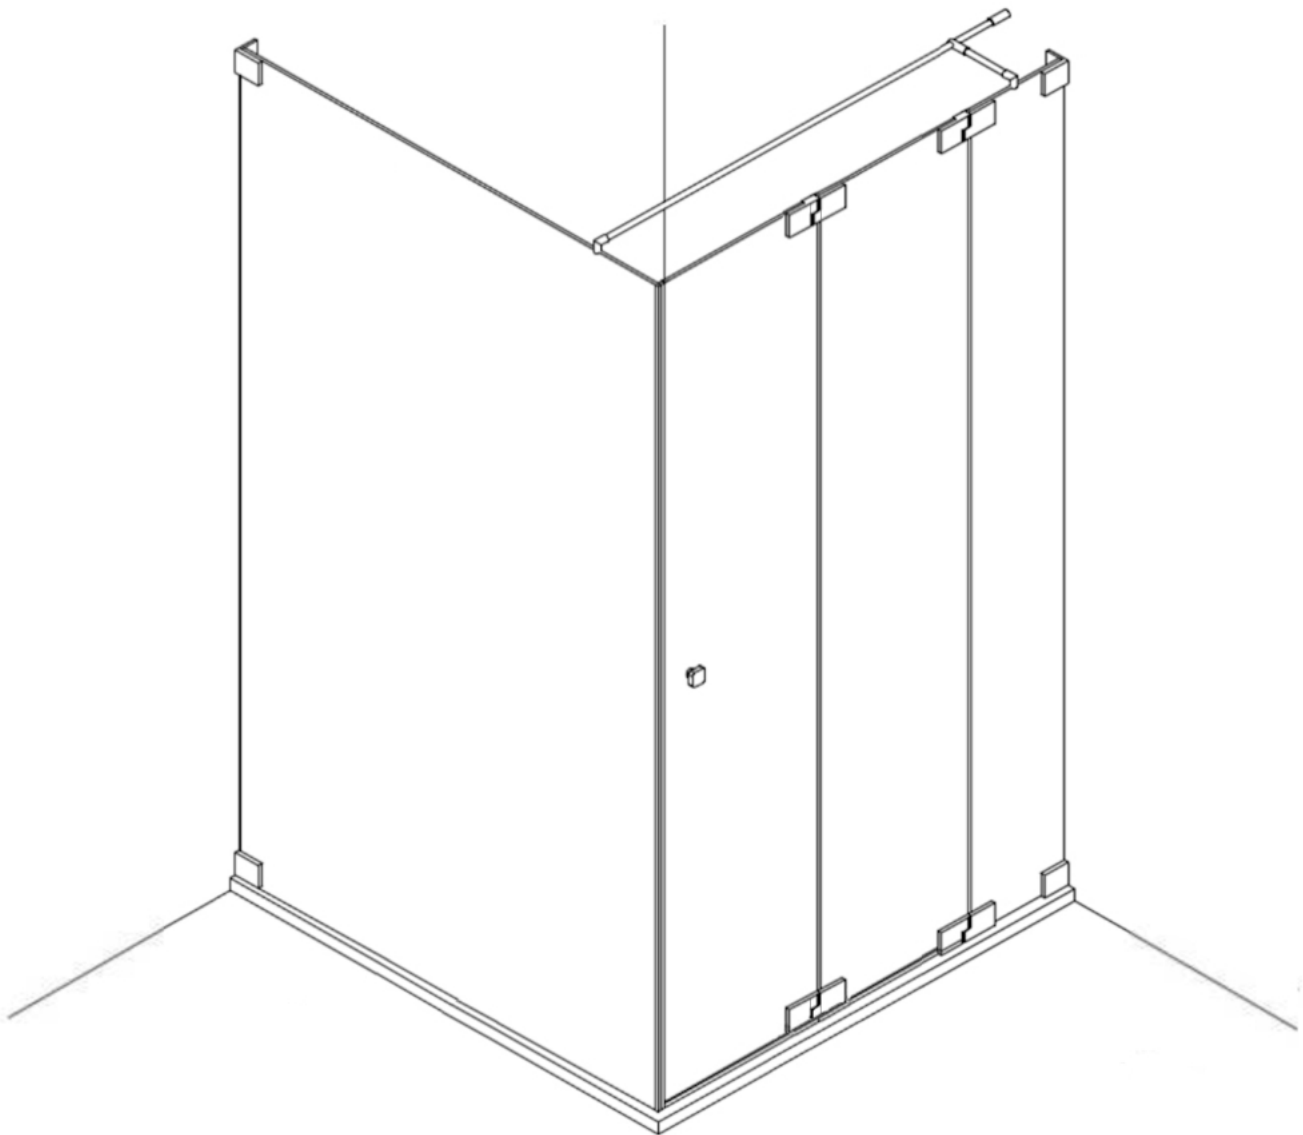



Eckdusche mit Falt-Türe an Festteil und Festwand

Corner shower enclosure with folding door on fixed part and fixed side panel

Links/Left

1 x G/GAS-RO		1 x G2/G2H		12 x G100		8 x 	4 x F1	
1 x G/GAS-RU		1 x G3/G3H		12 x G300		8 x 	4 x C2	
1 x G/GS-RO		1 x G10		4 x G301		12 x 	1 x G/SUT120	
1 x G/GS-RU		2 x G13/G13H		4 x G302		1 x 		
2 x G/FX-LU/RO		1 x G8F/G8FH		1 x G400		1 x 		
2 x G/FX-LO/RU		1 x G8/G8H						

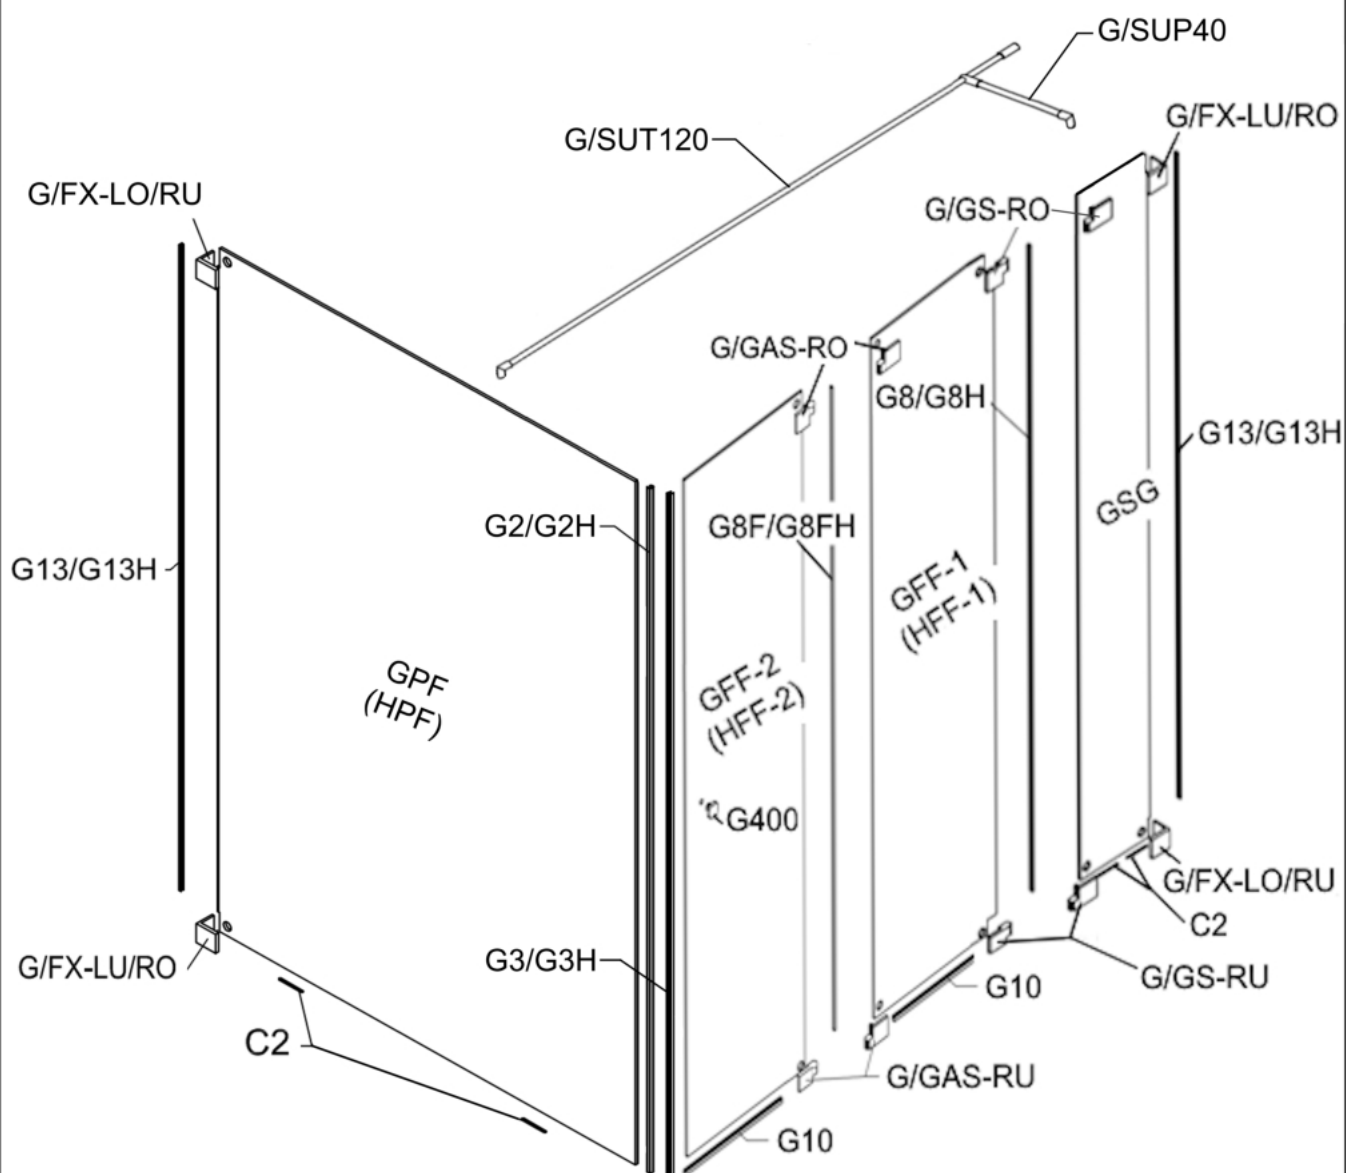

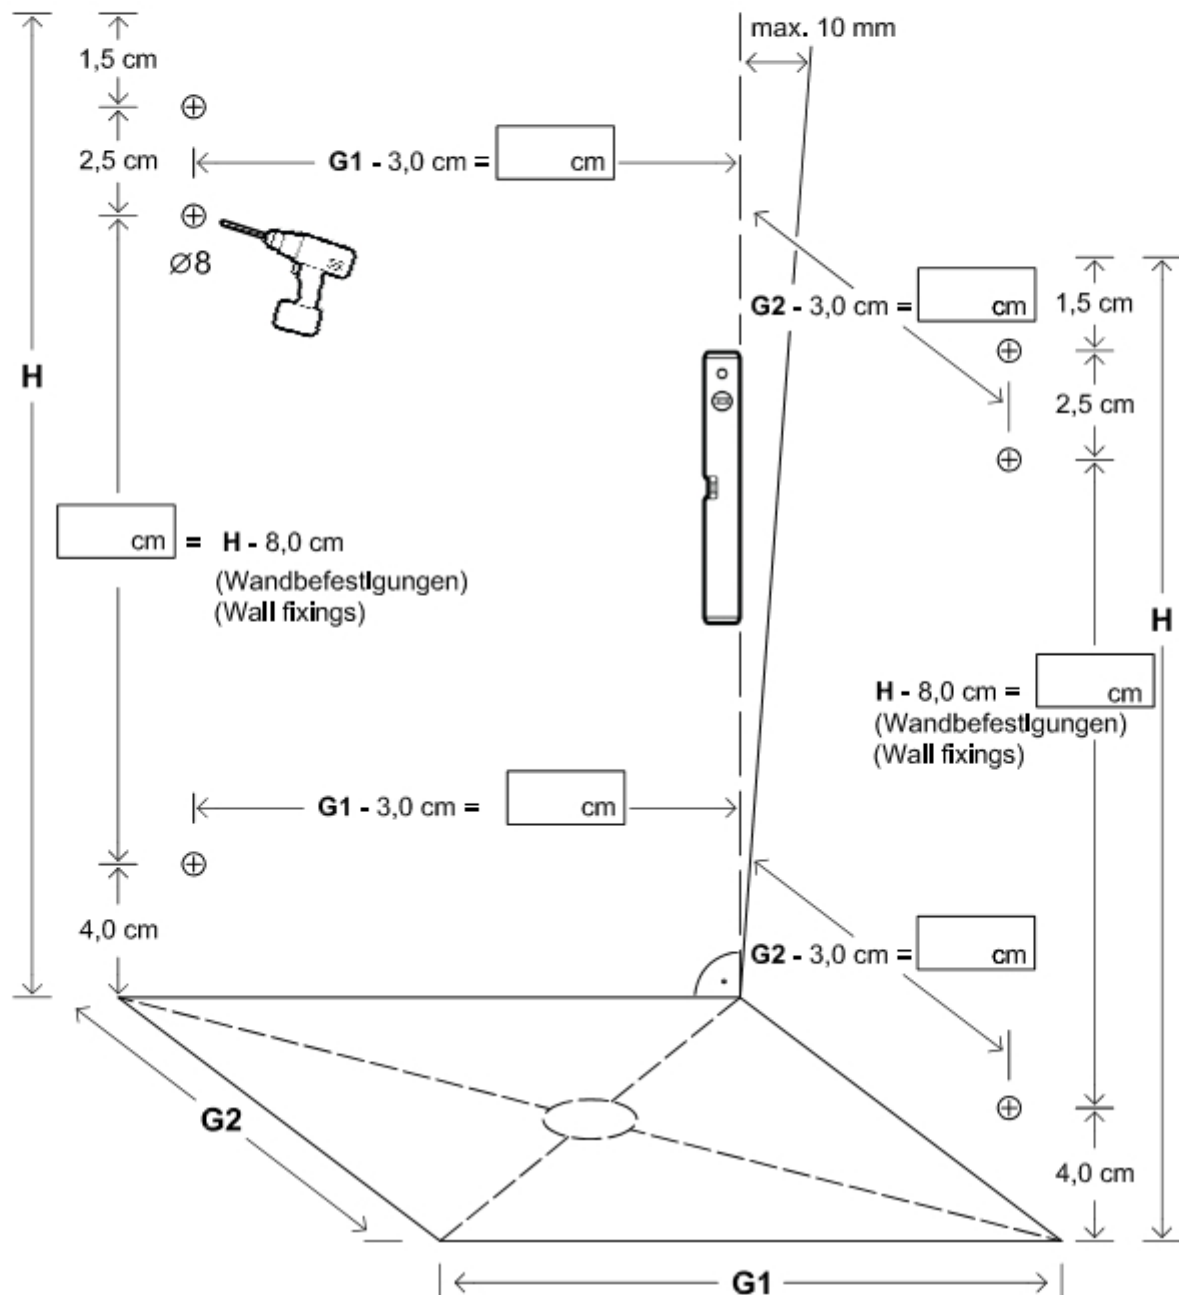




Diese Maße finden Sie in ihrem Auftrag:
You find this measures in your order:


H = Glas - Höhe
Glass height

G1, G2 = Glasaußenkante (unterer Wert des Verstellbereichs)
Outer edge of the glass (lower value of adjustment range)

Die Zeichnungen sind **nicht** Maßstabsgetreu.
The drawings are **not** to scale.

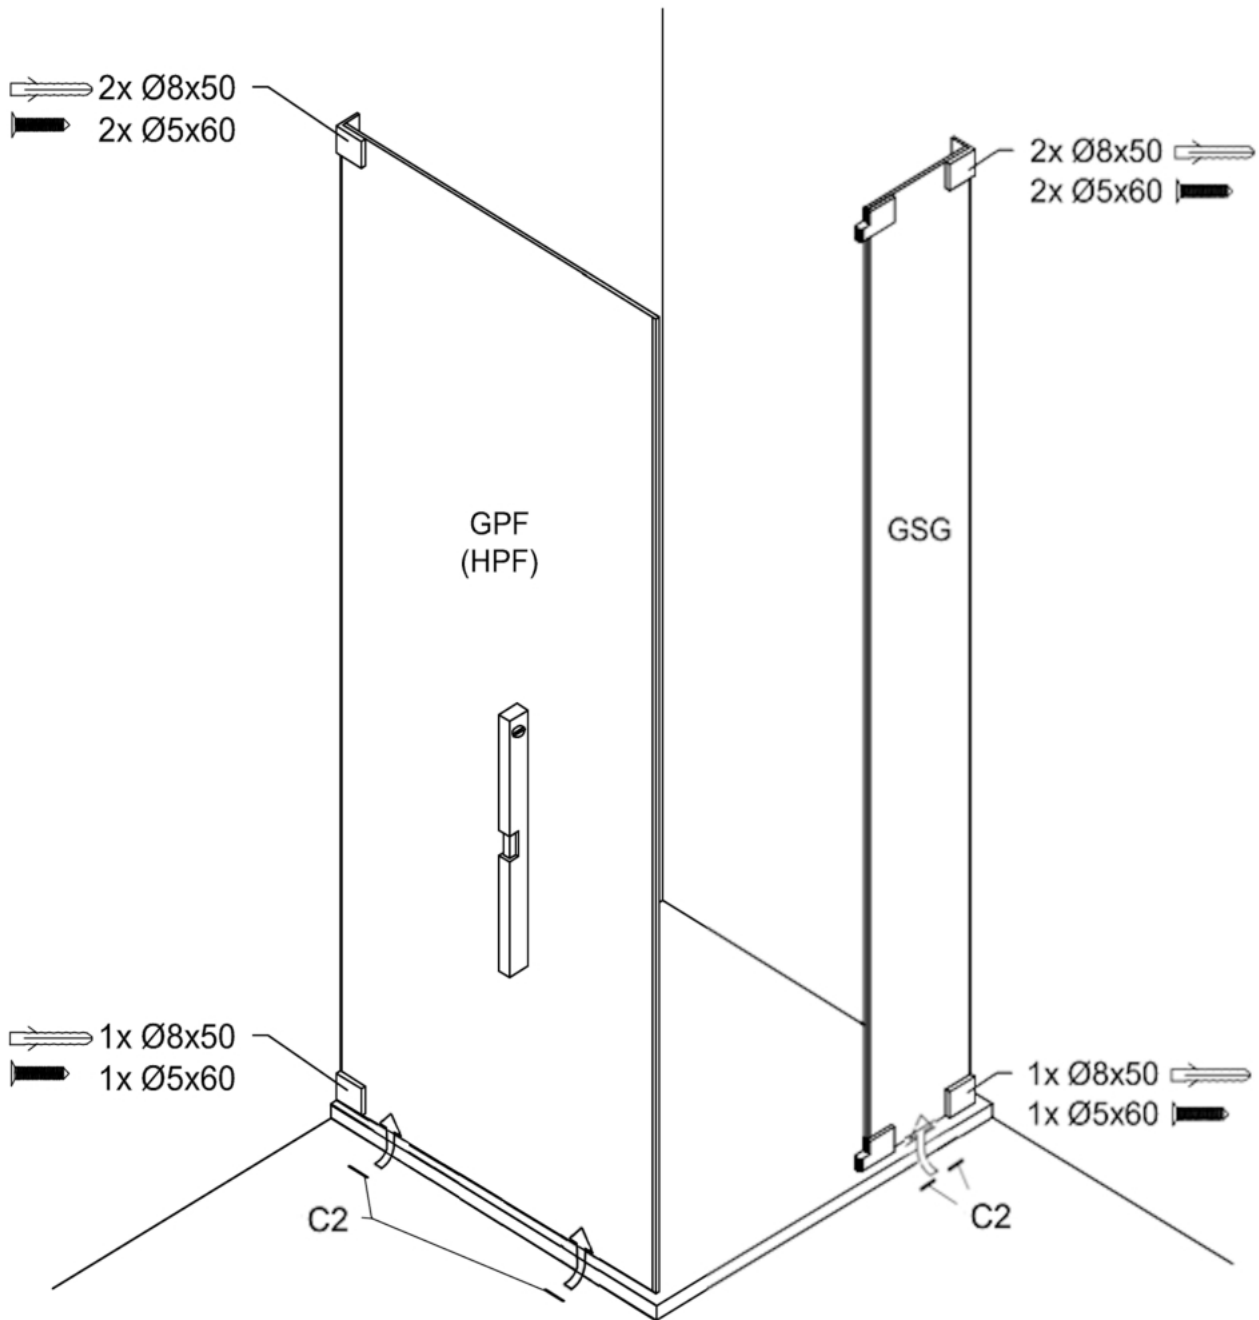

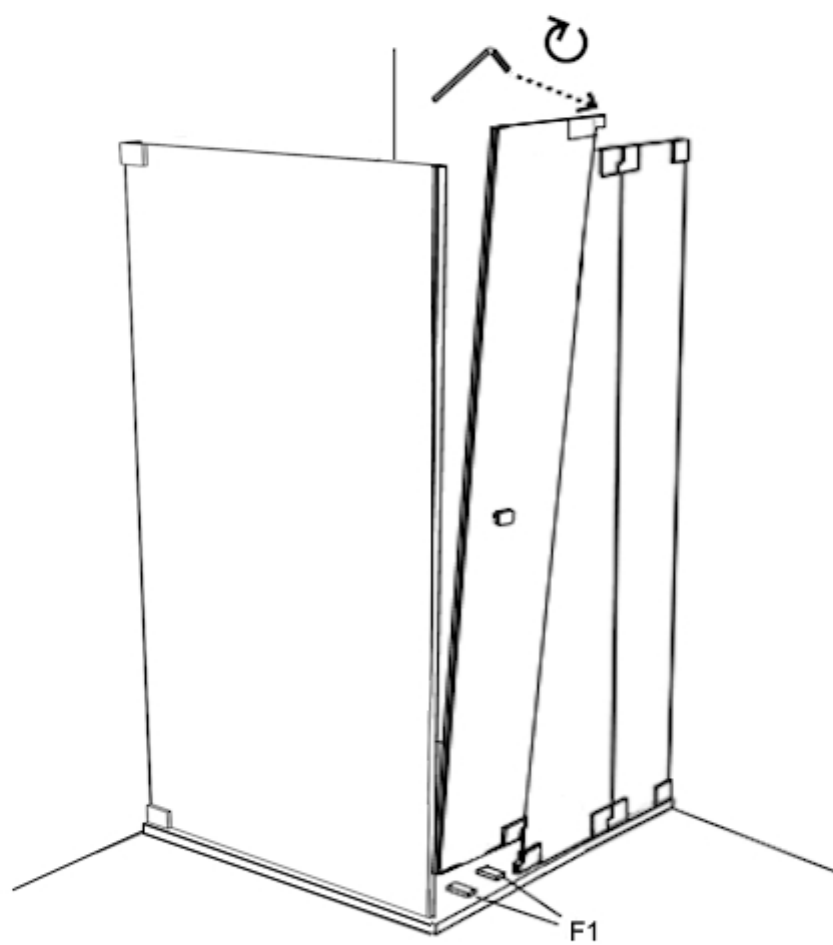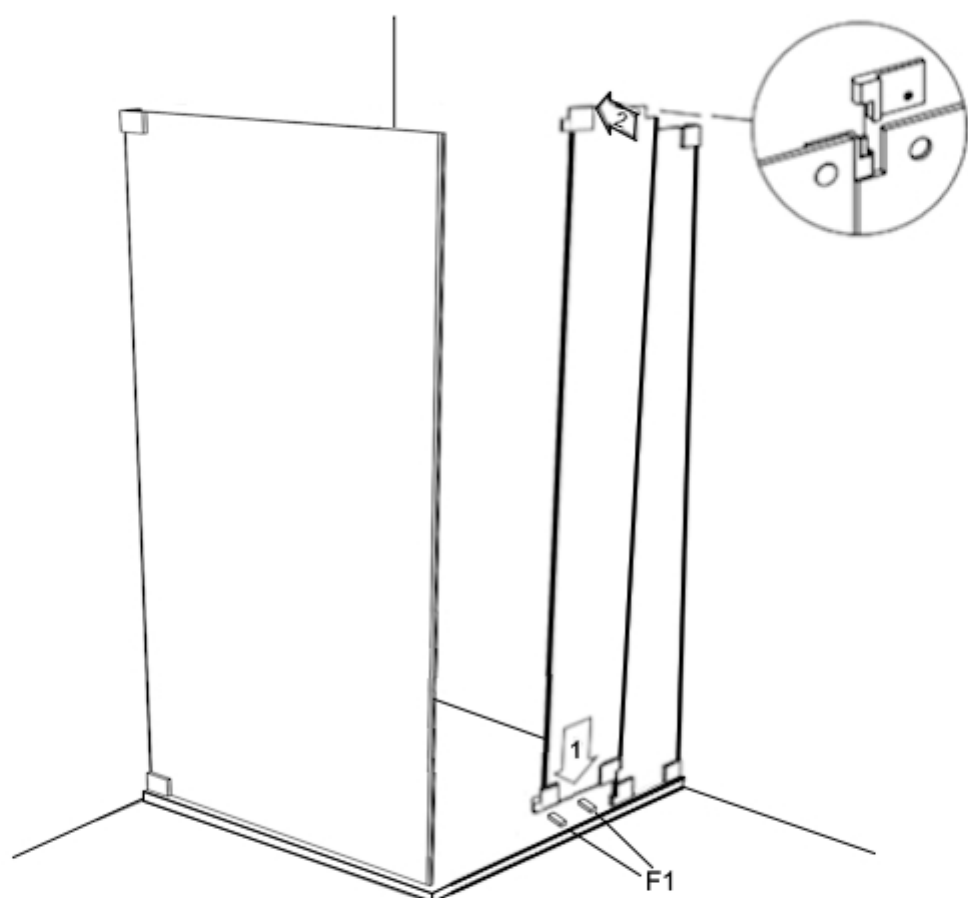

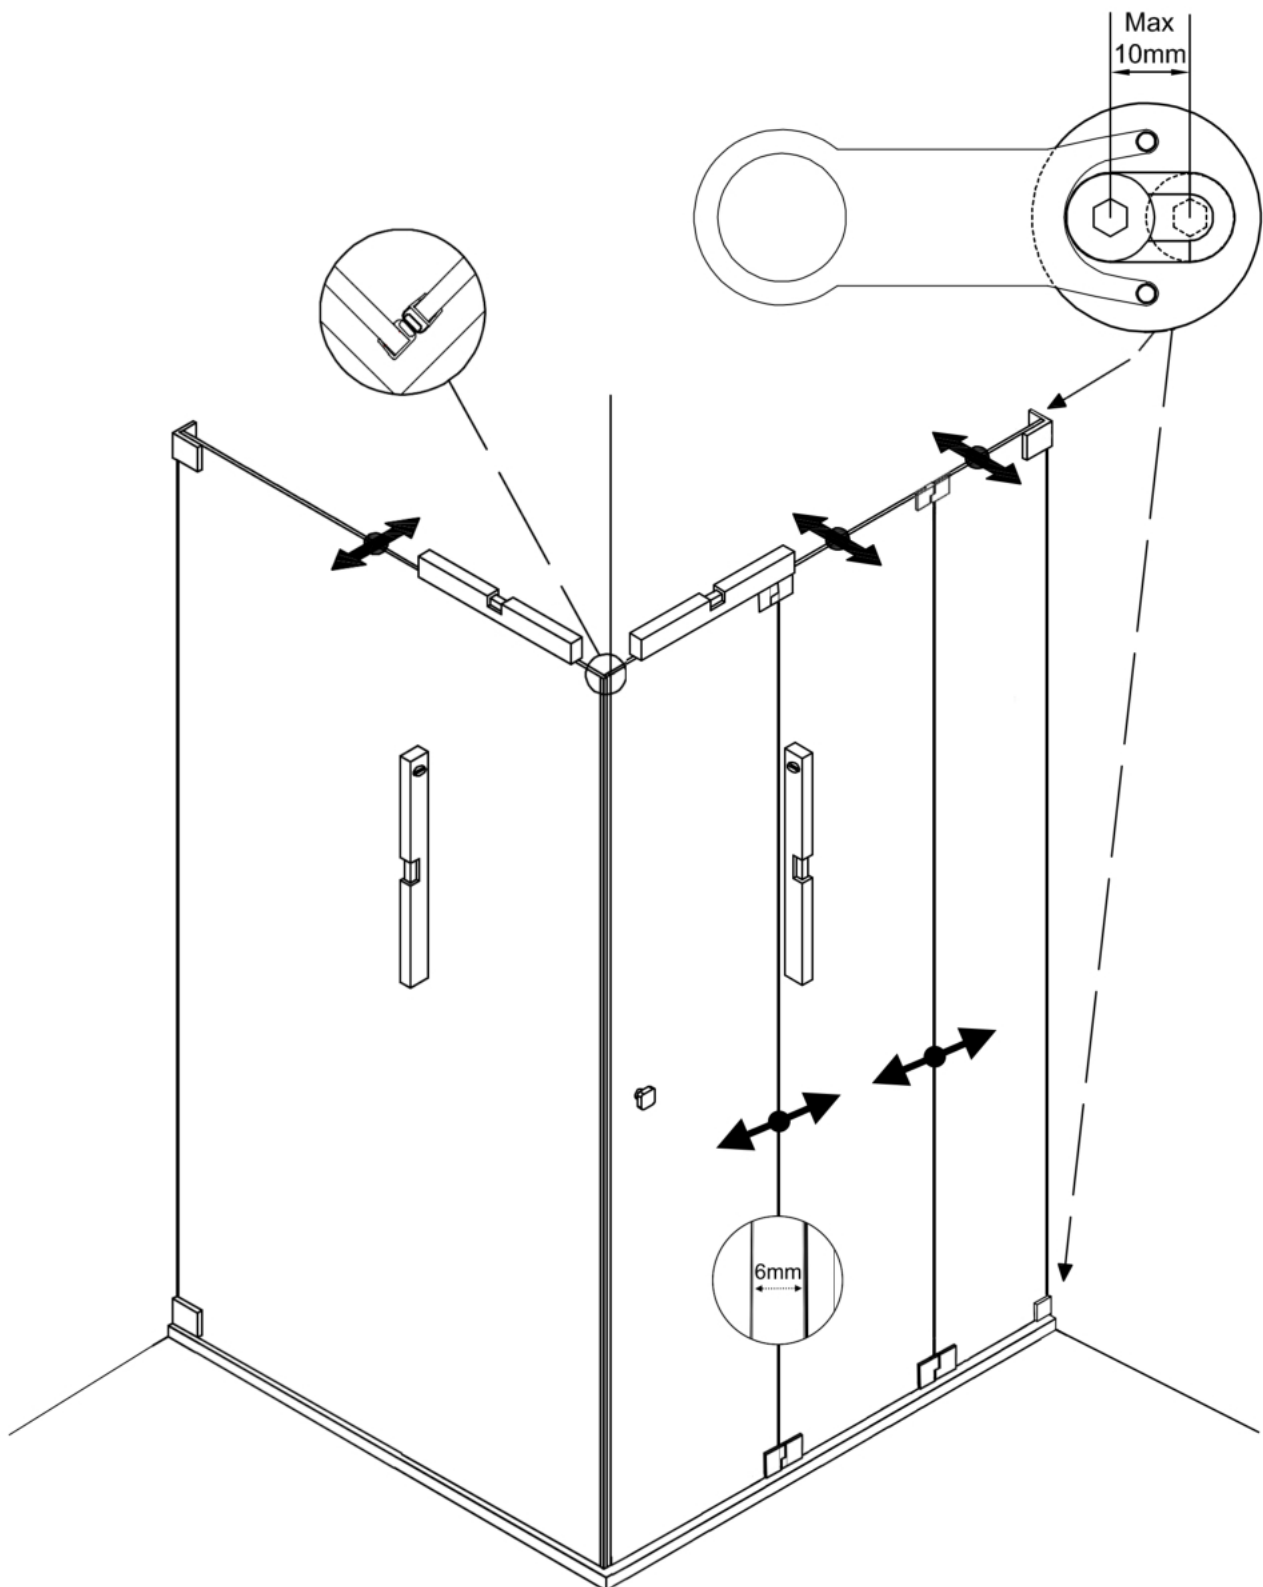

Richten Sie das Glas-Festteil senkrecht aus und fixieren Sie die Inbus-Schrauben in den Langlöchern der Glasbefestigungen. Mit dem Montage-Schlüssel können die Glasbefestigungen dabei waagrecht gehalten werden. Schieben Sie dann das Kompensationsprofil (G13 / G13H) auf dem Glas mit Druck an die Wand, um Schrägen auszugleichen. Bei gerader Wand kann auf das Kompensationsprofil verzichtet werden und der senkrechte Wandanschluss absilikontiert werden (Abstand Wand / Glas min. 3 mm).

Set up the fixed glass part vertically and fix the Inbus screws in the slotted holes of the glass fixings. By using the installation key the glass fixings can be kept horizontally. Slide the compensation gasket (G13 / G13H) with force on the glass against the wall to even out possible slopes. A straight wall does not need the compensation gasket. In this case apply silicone caulking to the vertical connection (distance wall / glass min. 3 mm).

