




# DR1S





Duschrinne mit Seitenablauf  
Shower channel with side outlet

DRAB

DRAB + DRSF

DRSF

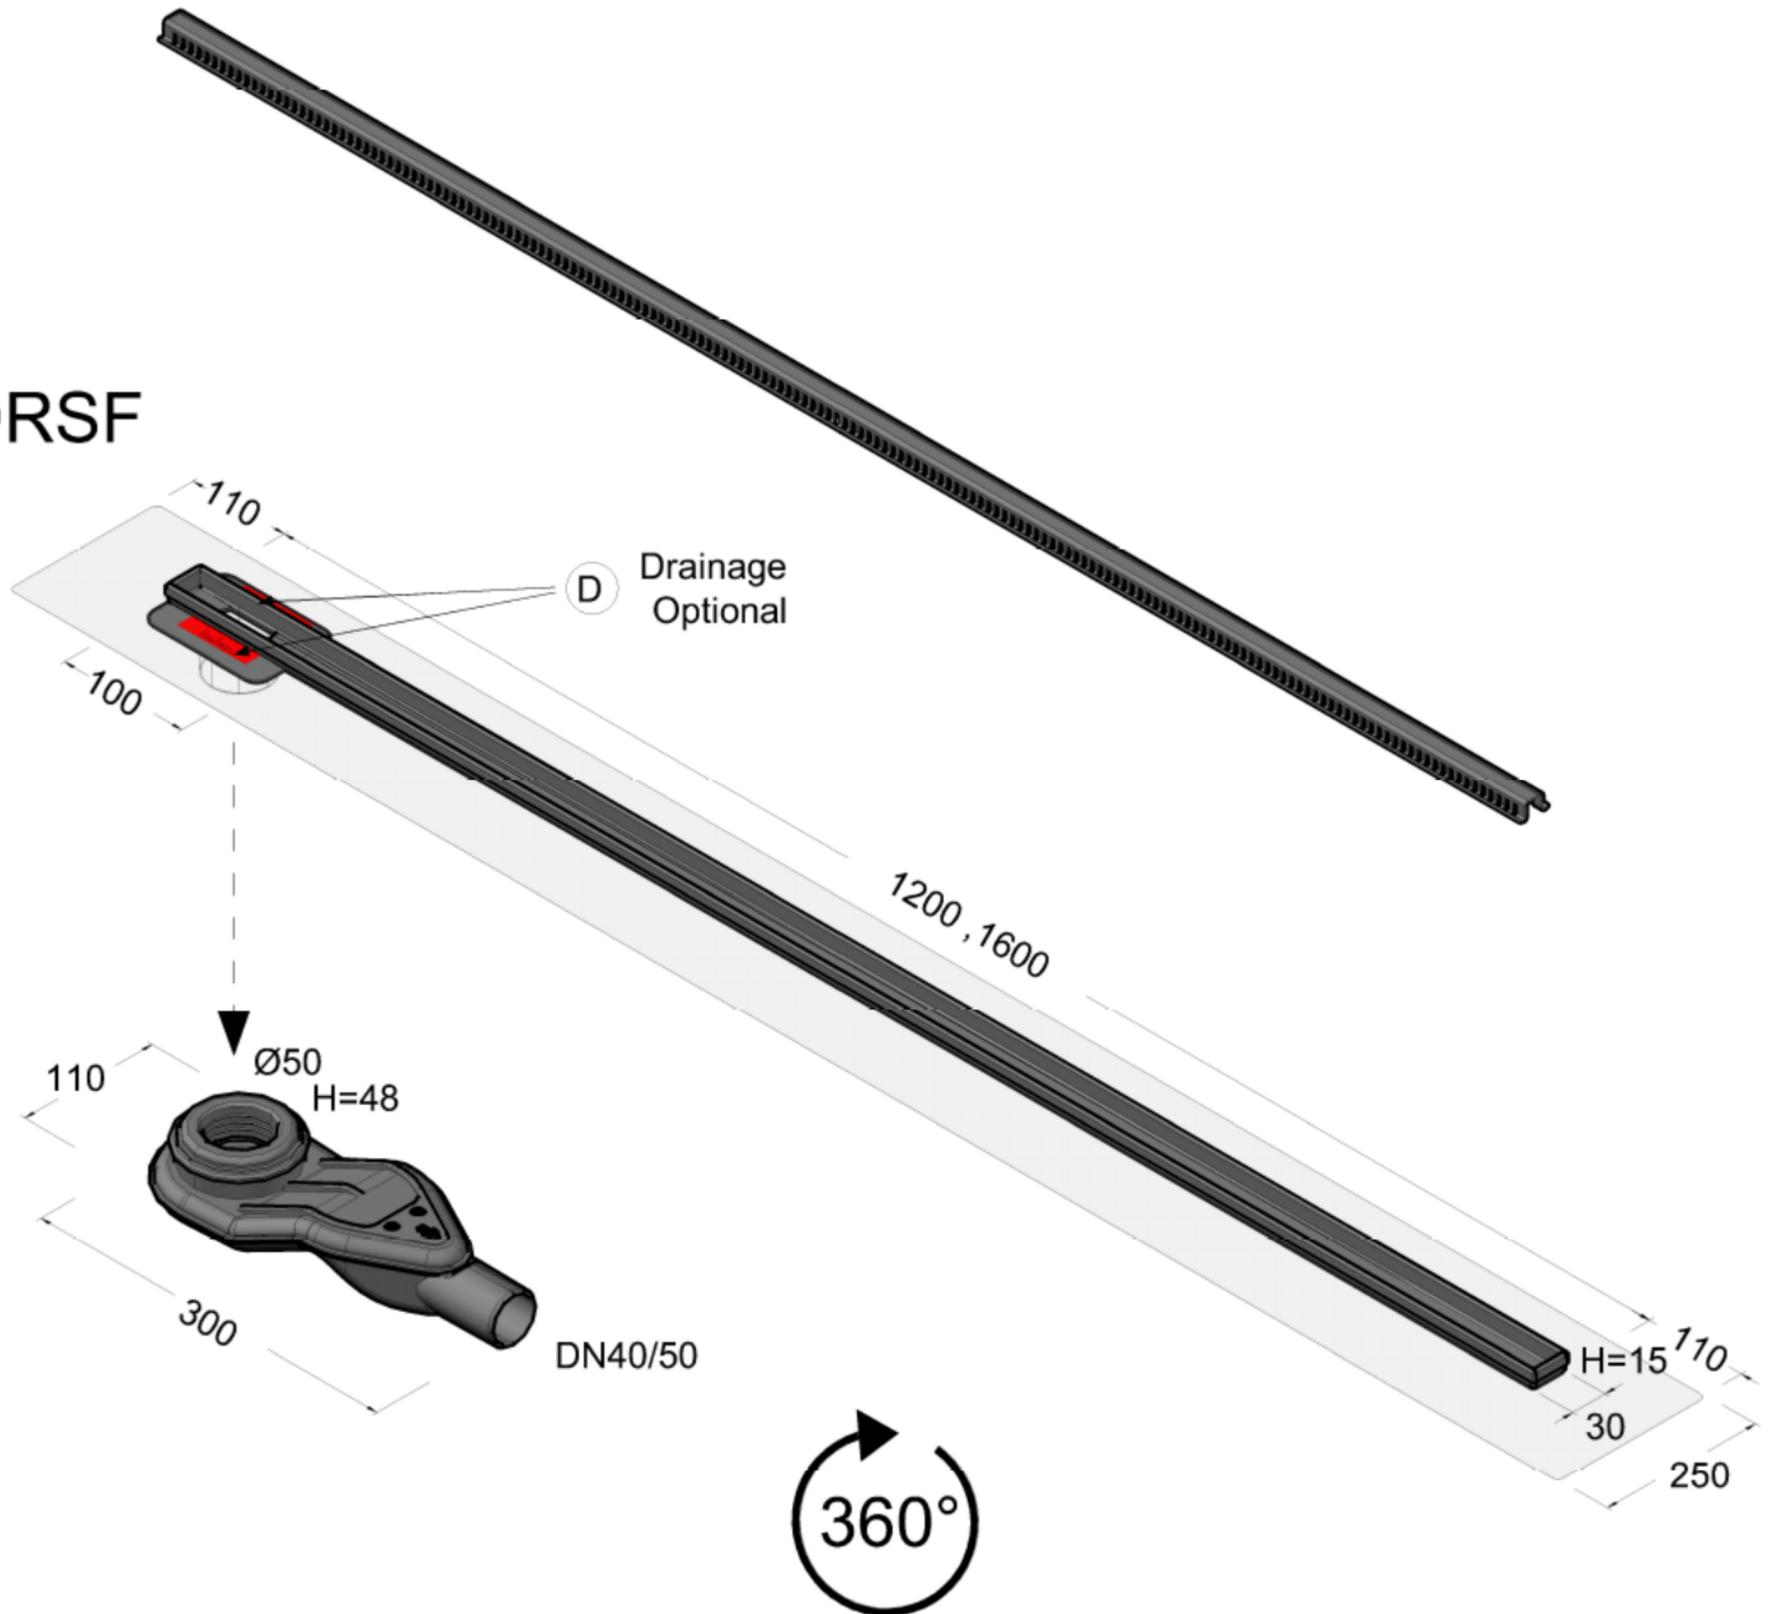

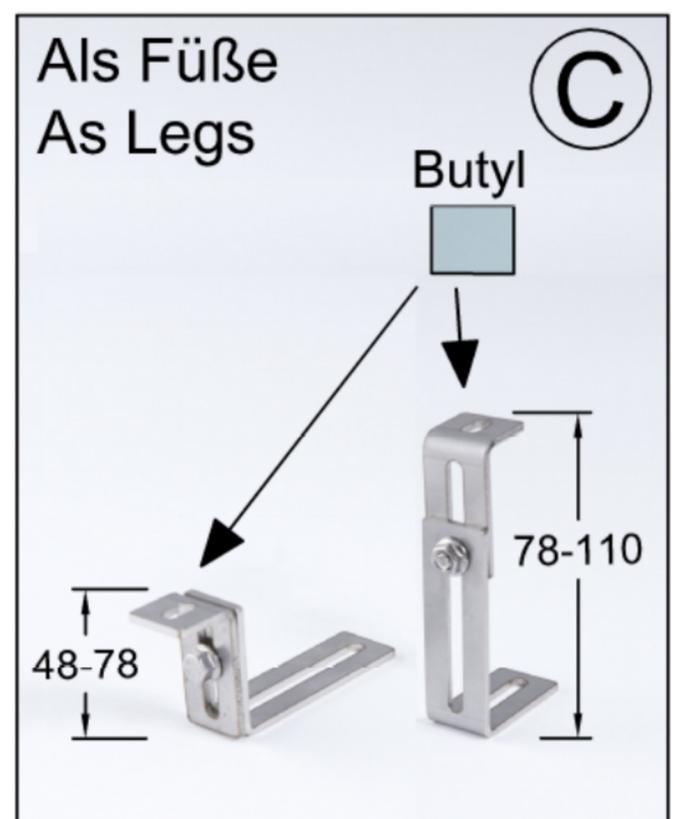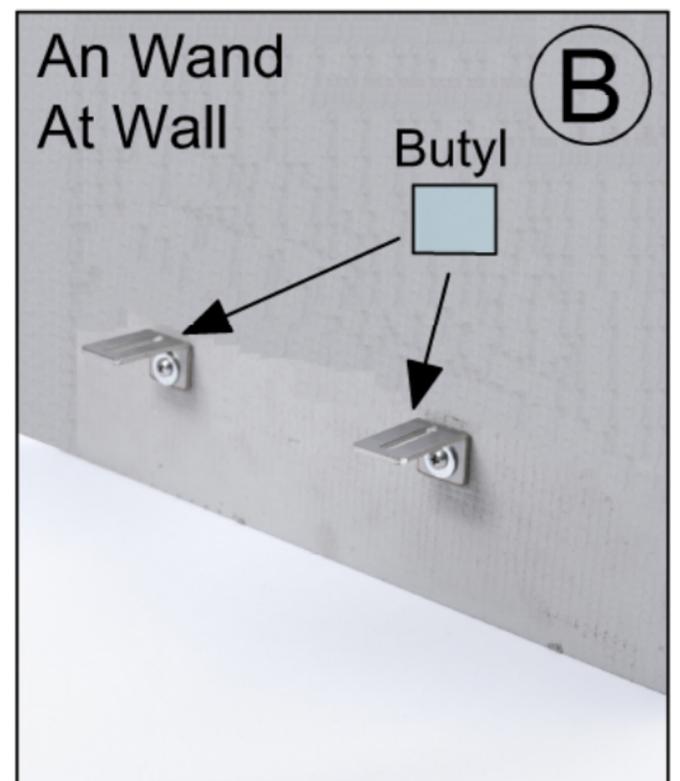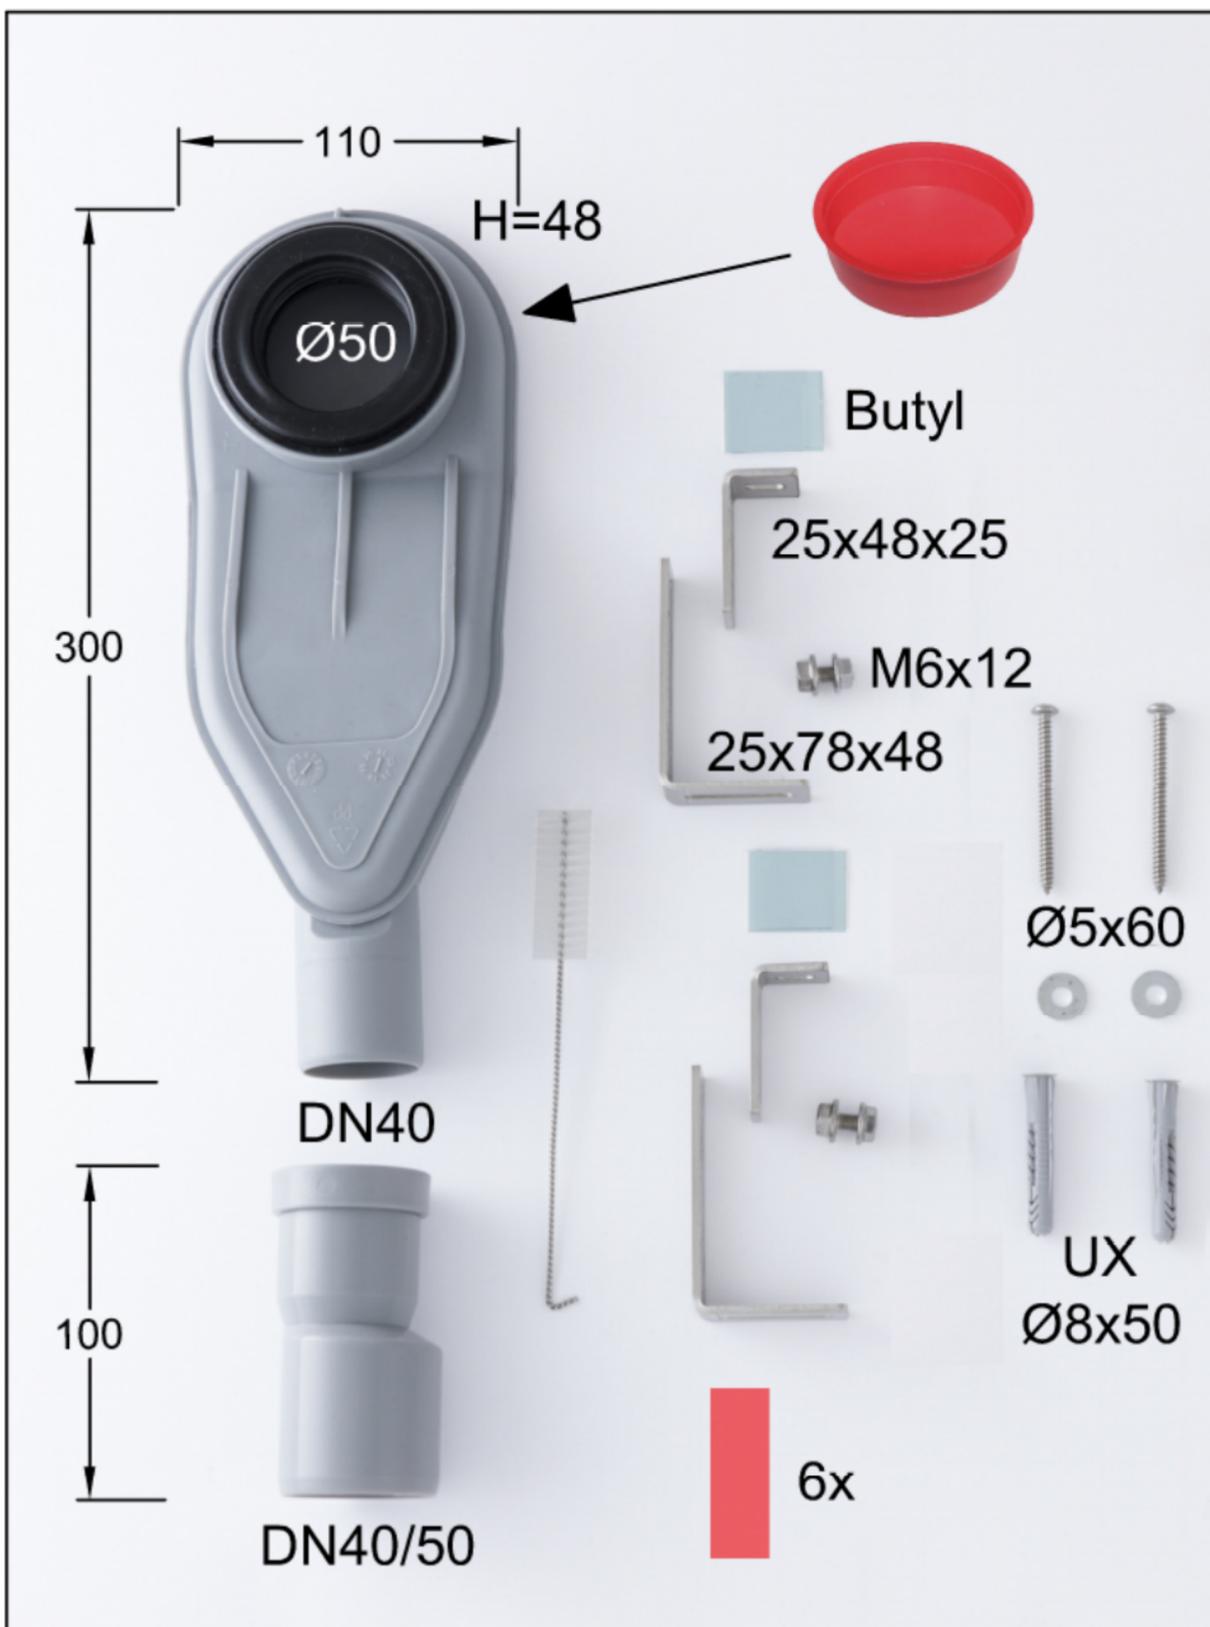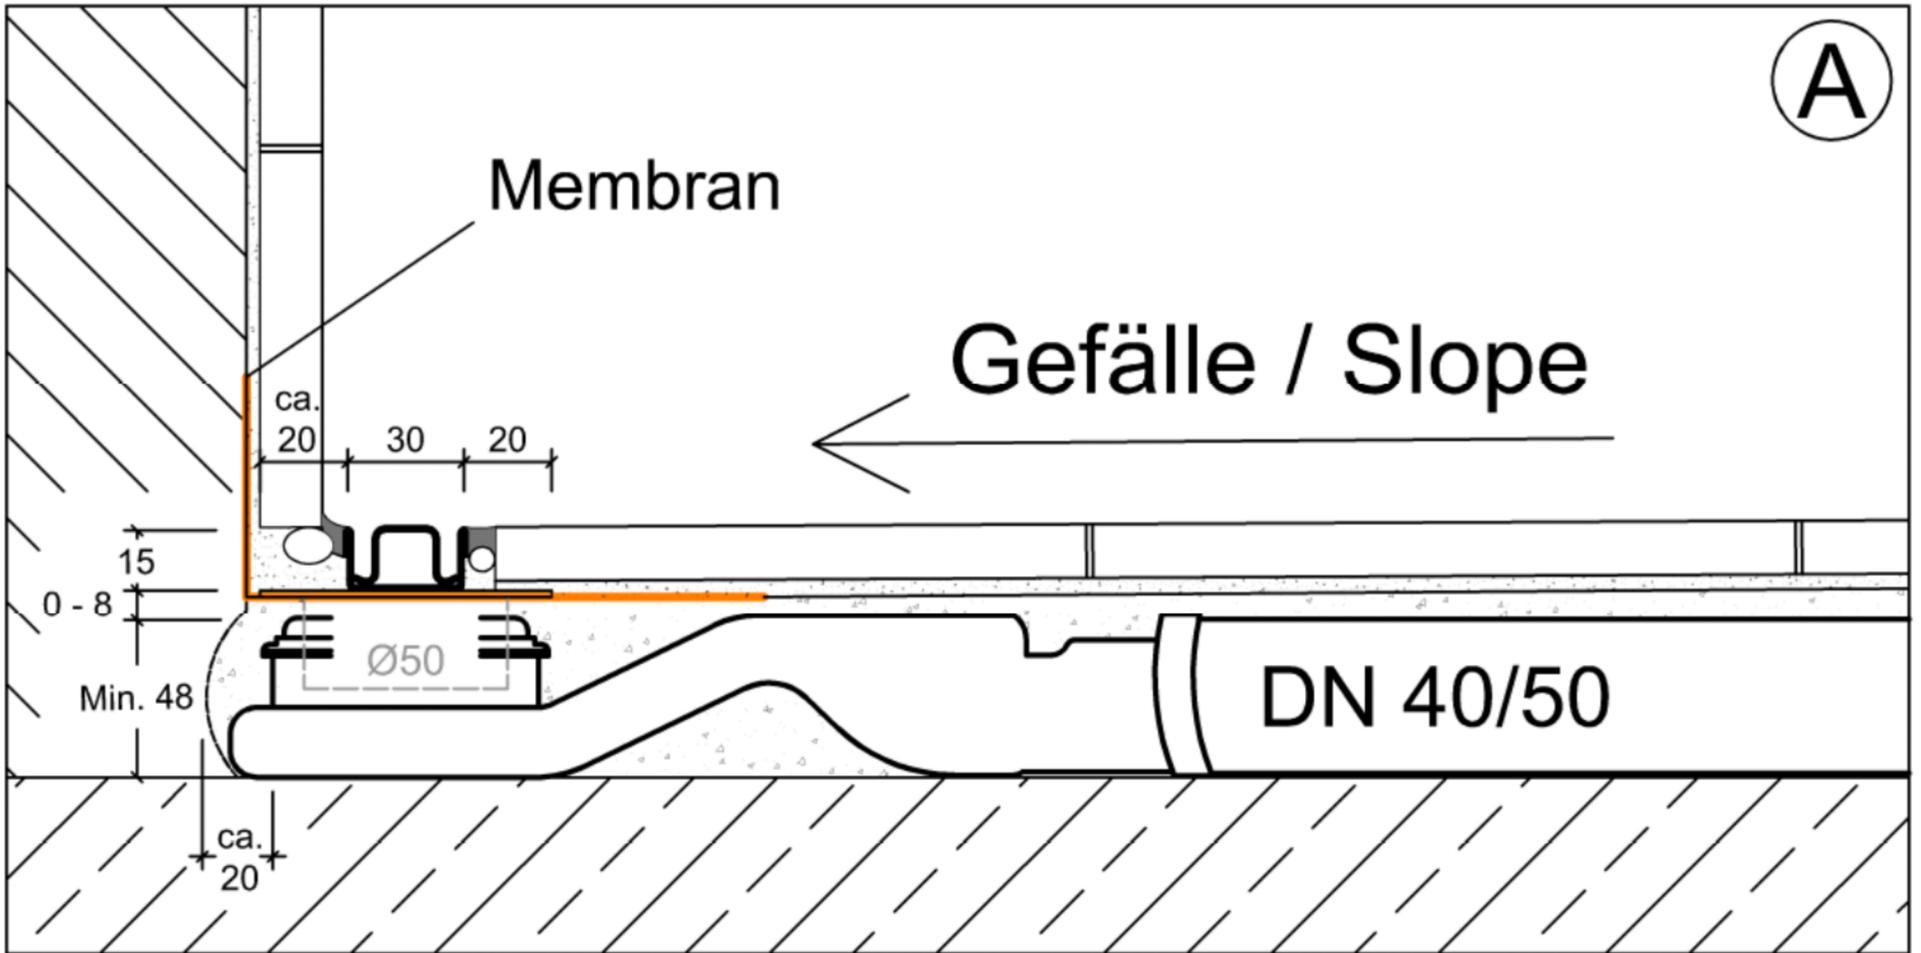

# DR1S

## Duschrinne mit Seitenablauf DRAB + DRSF

①

Schließen Sie den Siphon an das bauseitige Ablaufrohr mit Gefälle an, so dass er waagrecht und fest steht (ggf. den Siphon unterfüttern / fixieren). Der Siphon ist 360° drehbar und kann auch direkt unter der Rinne nach links oder rechts geführt werden für eine minimale Einbauhöhe von 48 mm. Prüfen Sie den Ablauf durch Einfüllen von Wasser und verschließen Sie dann mit der roten Bauschutzkappe.

Der 360° drehbare Duschrinnen-Körper DRSF (H = 15 mm) mit werkseitig auf der Unterseite verklebter, hochflexibler Dichtmembran hat keinen umlaufenden Flanschrand. Dadurch können Bodenfliesen verschiedener Stärke verwendet und direkt dahinter senkrechte Wandfliesen angebracht werden (Dichtmembran rundum 110 mm überlappend / bei DRSF120, DRSF160 lose Dichtmembran unten ankleben).

②

Wenn Sie mit einem Gefälleboard arbeiten, muss dieses ggf. ausgespart werden:

**Der senkrechte Ablaufstutzen (Ø 50 mm / H = 30 mm) des Duschrinnen-Körpers DRSF muss immer ganz oder bis auf max. 8 mm ausgezogen in die schwarze Gummidichtung des Siphons eingeführt werden (Tauchtiefe max. 30 mm, min. 22 mm) ①.**

Der Duschrinnen-Körper DRSF kann ohne Füße mit der Dichtmembran mit Fliesen-Flexkleber / Flächendichtung direkt auf Gefälleboard, Boden und an der Wand verklebt / befestigt werden ①.

Alternativ können die Langloch-Winkel verwendet werden zur Befestigung direkt vor der gefliesten Wand ② oder als Füße für H = 48-78 mm bzw. 78-110 mm, wobei die Füße auch frei im Raum in den Boden geschraubt werden können ③. Der Duschrinnen-Körper DRSF wird in beiden Fällen mit den Butylstreifen oben auf die Winkel aufgeklebt.

Den Duschrinnen-Körper DRSF immer exakt waagrecht oder mit einem Gefälle zum Seitenablauf ausrichten und nochmals mit Wasser den Ablauf prüfen (es kann in den Langloch-Winkeln nachjustiert werden).

Wenn bauseits ein Gefälleestrich erstellt wird, Dichtmembran zunächst nach oben / an Wand mit roten Klebestreifen (6 x) fixieren und nach Aushärten des Gefälleestrichs verkleben. Der Duschrinnen-Körper DRSF muss immer vollständig unterfüttert werden.

③

Optional: Durch das Abziehen der roten „Drainage“-Streifen können vor dem Einfliesen die Öffnungen für Sekundärentwässerung geöffnet werden ④. In der Regel führt die Abdichtungsebene unter dem Belag aber kein Wasser und die Öffnungen sollen geschlossen werden (DIN 18534).

Den fertig eingefliesten Duschrinnen-Körper DRSF rundum zum Fliesenanschluss absilikonieren.

Mit dem Haken an der Bürste kann die Duschrinnen-Abdeckung DRAB entnommen werden und auch durch Drehung des Hakens im Siphon ggf. Haare usw. „aufgewickelt“ werden.

# DR1S

## Shower channel with side outlet DRAB + DRSF

①

Connect the siphon to the on-site drain pipe with a slope so that it stands horizontally and firmly (if necessary, shim / fix the siphon). The siphon can be rotated 360° and can also be routed directly under the channel to the left or right for a minimum installation height of 48 mm. Check the drain by filling with water and then close with the red construction protection cap.

The 360° rotatable shower channel body DRSF (H = 15 mm) with highly flexible sealing membrane glued to the underside at the factory has no surrounding flange edge. This allows floor tiles of various thicknesses to be used and vertical wall tiles to be fitted directly behind them (sealing membrane overlapping all around 110 mm / for DRSF120, DRSF160 glue on loose sealing membrane).

②

If you are working with a slope board, this may have to be cut out:

**The vertical drain socket (Ø 50 mm / H = 30 mm) of the shower channel body DRSF must always be inserted fully or extended to max. 8 mm into the black rubber seal of the siphon (immersion depth max. 30 mm, min. 22 mm) ①.**

The shower channel body DRSF can be glued / fixed directly to slope board, floor and wall without feet with the sealing membrane using tile flexible adhesive / surface seal ①.

Alternatively, the slotted hole brackets can be used for fixing directly in front of the tiled wall ② or as feet for H = 48-78 mm or 78-110 mm, whereby the feet can also be screwed into the floor freely in the room ③. The shower channel body DRSF is glued onto the top of the angles with the butyl strips in both cases.

Always align the shower channel body DRSF exactly horizontally or with a slope to the side drain and check the drain again with water (it can be readjusted in the slotted hole angles).

If a sloping screed is to be created on site, first fix the sealing membrane upwards / to the wall with red adhesive strips (6 x) and glue after the sloping screed has hardened. The shower channel body DRSF must always be fully relined.

③

Optional: By pulling off the red "drainage" strips, the openings for secondary drainage can be opened before tiling ④. As a rule, however, the waterproofing layer under the covering does not carry water and the openings should be closed (DIN 18534).

Silicone the finished tiled shower channel body DRSF all around to the tile connection.

With the hook on the brush, the shower channel cover DRAB can be removed and also by turning the hook in the siphon, if necessary, hair etc. can be "wound up".